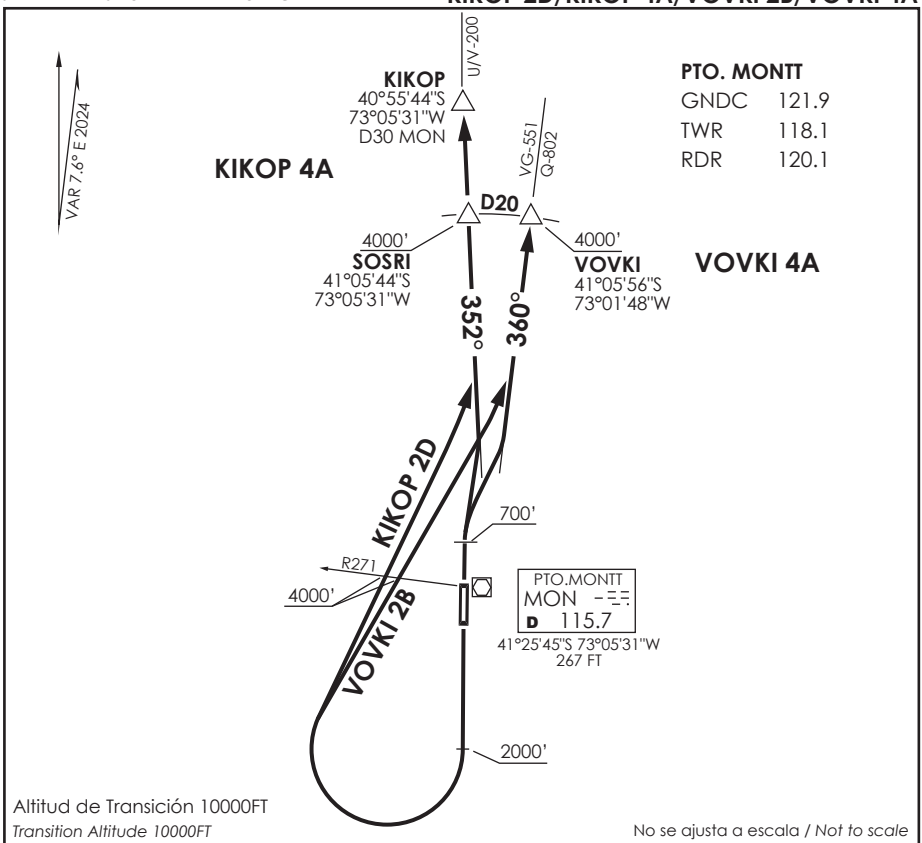


Altitud de Transición 10000FT
Transition Altitude 10000FT

No se ajusta a escala / *Not to scale*

KIKOP 2D

DEP RWY 17: Ascender en RWY HDG hasta 2000 FT, viraje derecha para interceptar R352 MON directo a KIKOP para interceptar AWY. Cruzar R271 MON 4000 Ft o superior.

TAKE OFF RWY 17: *Climb on RWY HDG until 2000 FT, turn right to intercept R352 MON direct to KIKOP to intercept AWY. Cross R271 MON at or above 4000 Ft*

KIKOP 4A

DEP RWY 35: Ascender en RWY HDG hasta 700FT, viraje derecha para interceptar R352 MON directo a KIKOP para interceptar AWY. Cruzar SOSRI 4000 Ft o superior.

TAKE-OFF RWY 35: *Climb on RWY HDG until 700FT, turn right to intercept R352 MON direct to KIKOP to intercept AWY. Cross SOSRI at or above 4000 Ft.*

VOVKI 2B

DEP RWY 17: Ascender en RWY HDG hasta 2000 FT, viraje derecha para interceptar R360 MON directo a VOVKI para interceptar AWY. Cruzar R271 MON 4000 Ft o superior.

TAKE OFF RWY 17: *Climb on RWY HDG until 2000 FT, turn right to intercept R360 MON direct to VOVKI to intercept AWY. Cross R271 MON at or above 4000 Ft.*

VOVKI 4A

DEP RWY 35: Ascender en RWY HDG hasta 700FT, viraje derecha para interceptar R360 MON directo a VOVKI para interceptar AWY. Cruzar VOVKI 4000 Ft o superior.

TAKE-OFF RWY 35: *Climb on RWY HDG until 700FT, turn right to intercept R360 MON direct to VOVKI to intercept AWY. Cross VOVKI at or above 4000 Ft.*

DASA / SECCION AIS-MAP